

TIPS THAT ARE INCLUDED IN THE POWERMONKEY V2 KIT

BRAND	TIPS	COMPATIBLE
Acer	N35	Acer N30/N35, Navman Pin 570, Q2, X3
		Fuji Finepix F10, Z2
Apple	iPod	iPod (3rd, 4th, 5th Gen), Mini, Nanao, Photo, Video, Shuffle, iPhone, iTouch
	3GS	iPhone 3GS, iTouch 3GS
Archos Media Player	DC3.5 x 1.3	AV300, AV400
Axim	PDA	X30
Blackberry	V3 Mini USB	6210, 6220, 6230, 6280, 6510, 6710, 6720, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130e, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 7730, 7750, 8100 Pearl, 8700c, 8700f, 8700g, 8703e (8800), XDAIII
Blackberry	Micro USB	Pro, Storm 9530, Storm2 9550, Tour 9630, Bold 9700, Curve 8520, 8530, 8900, BlackBerry Pearl. Flip 8220/Kickstart, BlackBerry Thunder-9500
Blackberry headset	V3 Mini USB	
Bluetooth Headset	V3 Mini USB	
Bluetooth Headset (Moto)	DC2.5	HB610
	V66	HS-850
Canon	DC2.3	Powershot A300/A310/G6
	DC4.0	750, V3
Creative	Mini USB	ZEN V Plus, ZEN V, ZEN Micro, ZEN MicroPhoto, ZEN Neeson, MuVo, Slim
	DC4.0	ZEN, ZEN Touch, ZEN Vision, ZEN Vision M, MuVo2, MuVo2 FM (ZEN PMC, ZEN Sleek
Dell	DC4.0	Axim X3/X5
	PDA	Axim X30
DoCoMo/Foma	VGS	
DoCoMo/Vodaphone	TU-KA	
Fuji FinePix	N35	F10, Z2
	DC2.3	A310
	DC2.0	4700
Gameboy	DS	Advanced SP
Garmin	V3 Mini USB	Forerunner 205, 203 & 301, Edge 205 & 305
	DC2.5	Nuvi
HP IPAQ	PDA	HW6510, HX2190, HX2790, HW6915, HW6920, HW6825, HW6945, HX6945, HX2115, HX2490, HX2495, H3970
HTC	Micro USB	Evo, Incredible, ThunderBolt
iAudio	DC2.5	X5
i-mate		PDA2k
iRiver	V3 Mini USB	T10, T30, PMP-100, PMC-100, H300, iGP-100, iFP-1000, iFP-900, iFP-800, iFP-700, iFP-1000, iFP-900, iFP-800, iFP-700, iFP-300, N10
Kyocera	Micro USB	E2000, Tempo
LG	Chocolate	AX275, AX8600, Chocolate, EnV, LX150, VX5400, VX8350, VX 8500, VX8600, VX8700, VX9400, VX9900, KE970, KG90, KG800, KG810, KG320, U970 (VX8500), Shine U970, CU575
	VX10	V111, VX1, VX2000, VX3100, VX3100A, VX4400, VX4400B, 1010, 4NE1
	VX8300	Migo, VX3300, VX3400, VX3450, VX4650, VX4700, VX5200, VX5300, VX6100, VX7000, VX8000, VX8100, VX8300
	VX6000	VX4500, VX4600, VX6000, 1200, L1200, C930, LX5450, LX5550, VI5225, GZ-One
	8080	1400, 1400C, 4010, 4011, 4015, 4020, 4050, 6260, 7020, 7050, 8080, 8181, A7110, B2000, B2050, B2100, LC1100, C1100, C1200, C1300, C1500, C2000, C2200, C3300, C3300, C3310, C3320, CE500, CG225, CG300, CU400 F2250, F2400, F7200, F9100, F9200, L1100, L1150, L1200, L1400, L1500, P7200, S5200, SC9288, SC9388, U300, U880, U970, U8110, U8120, U8130, U8138, U8150, U8180, U8290, U8330, U8360, U8380, U880, U890 (8080, 6260, SC9338, 7020)

TIPS THAT ARE INCLUDED IN THE POWERMONKEY V2 KIT

BRAND	TIPS	COMPATIBLE
	Micro USB	LG AX300, LG AX500, LG Rhythm-AX585 UX585, LG Glimmer AX830, LG CF360, LG Incite CT810, LG Rumor2 LX265, LG Banter AX265, LG LX400, LG Lotus-LX600, LG UX300, LG VX5500, LG VX8360, LG Chocolate-3-VX8560, LG Decoy VX8610, LG enV2, VX9100, LG enV3 VX9200, LG enV Touch VX11000, LG Versa VX9600, LG Dare VX9700
Minolta	DC2.3	Dimax F100, Pentos Optio 50
Mio Digi Walker	V3 Mini USB	168, 268, 269, 269+, 336BT, 336i, 339, 8390, 8870, A201, A701, C510E, C710, P350, P550
Motorola	V3 Mini USB	ic402, ic502, A780, E770v, E1070, L2, L6, PEBL, MOTOKRZR K1&K1m, RAZR series: V3r, V3t, V3xx, V3m, V3, V3c, V3i, V3m, V3x, Z3, MOTOSLVR L7c, V360, V360v, SLVR, V190, V195, V197, V235, V323, V323i, v325, V325i, V360, V361, V365, W315 (A1200, A70, A732, A780, C305, C363, E2, E680, E680i, Q, U6, V191, V320, Cingular L2/L6/L6g
	V66	388C, A630, A830, A835, A920, A1000, C331 & C332 (TDMA versions), C333 (CDMA with antenna), C341, C343, C353 (TDMA), C975, E310, E1000, MPx220, ROKR, T280i, T300p, T720, T720i, T721, T721i, T722i, T730, T731, V70, V260, V262, V265, V300, V400, V500, V505, V525, V545, V547, V550, V551, V600, V620, V635, V710, V810, V975, V1050, V60, C60i, V60c, V60P (PTT), V60s, V60t, V60g, V60x, V66, V66i, V120C, 120t, 120x, 120c, 120e, 270c, 280 V200 personal computer (A760, A840, A845, A860, A925, im1000, M300)
	V998	V998, V8160
	DC2.5	C290, i500
	DC3.0	C113, C113a, C115, C139, C155, C200, C300, C331 (GSM), C332 (GSM), C333 (GSM), C350 (without antenna), C336, C450, C550, T190, T191, T193, T193m, V150, T2260, T2282, T2297, V Series, V2260, V2267, V2282, V2290, V2297, V2397, V220, V220 PINK C116, C117, C118, C136, C137, C168, C193, C195, C202, C205, C257, C261, W220
	Micro USB	RAZR2, V8, V9, V9m, Q9, Q9h, Q Global RAZR3, Droid, Droid X, Droid II, Motorola Clutch i465, Motorola Stature i9, Motorola Q9h, Motorola Hint QA30, Motorola RAZR VE20, Motorola RAZR2-V8, Motorola RAZR2-V9, Motorola RAZR2-V9m Motorola RAZR2-V9x, Motorola V750 Adventure, Motorola V950 Renegade, Motorola Rapture-VU30, Motorola ROKR-E8, Motorola Z6c, Motorola Z9, Motorola Krave-ZN4, Motorola ZINE ZN5, Motorola i576, Motorola i776, ENV
Nintendo	DS	Original DS, Game Boy Advanced SP
	DS Lite	DS Lite
Nokia	DC2.0	N70, N71, N73, N75, N76, N80, N80e, N800, N90, N91, N918GB, N92, N93, N95, E50, E51, E61, E62, E65, E90, 770, 2865i, 3155i, 3250, 5200, 5300, 5500, 6070, 6080, 6085, 6086, 6101, 6102i, 6103, 6111, 6125, 6126, 6131, 6133, 6136, 6151, 6155i, 6165i, 6233, 6265, 6265i, 6270, 6275i, 6280, 6282, 6300, 6555, 7360, 7370, 7373, N72, N75
	DC3.5 x 1.1	E60, E70, 1100, 1101, 1110, 1110i, 1112, 1221, 1260, 1261, 1600, 2115i, 2116i, 2125i, 2126i, 2128i, 2260, 2270, 2285, 2300, 2310, 2600, 2650, 2652, 3100, 3105, 3108, 3120, 3200, 3205, 3285, 3300, 3285, 3300, 3350, 3360, 3361, 3390, 3395, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3585i, 3587i, 3589i, 3590, 3600, 3620, 3650, 3660, 5100, 5140, 5140i, 5210, 5510, 6010, 6015i, 6016i, 6019i, 6020, 6021, 6030, 6060 6061, 6100, 6108, 6170, 6200, 6220, 6225, 6230, 6230i, 6235i, 6236i, 6255i, 6260, 6310, 6310i, 6340, 6681, 6682, 6800, 6681, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7360, 7380, 760 7610, 7650, 7700, 7710, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8800, 8801, 8910i phones, 9210i, 9290, 9300, 9500 Communicators, N-Gage & n-Gage QD (6102, 6103, 6133, 6315, 2336 c&i, E62
	Micro USB	6500 Classic, 8600 Luna, 7900 Prism, 8800 Arte, 8800 Sapphire, Arte, N85, Nokia 1006, Nokia 1606, Nokia Mirage 2605, Nokia 6205, Nokia Intrigue 7205
O2	XDA	XDA Exec, XDA Mini Pro, XDA Mini S, XDA SP, Xphone II, Xphone lim, Cosmo, Sprint PDA PPC-6700, Vodaphone V1640/V2140/VPA, QTX Series PDA, VPA Compact, SPV C500/M500, HTC Artemis P3300, MTeoR, Excalibur s620, Hermes 100/200/300, Trinity P3600, TyTn, Dopod PDA 565/575/585/818/828/838/900, Orange SPV PDA Series
	N35	X3
Olympus	DC4.0	C-450 Zoom, U-10D, D-15D, D-20D, D-25D, D-30D, D-300D, D-400D, X-1, X-2, X-3, AZ-1, C50Z, C-60Z
	i705	i705, M120, M130, M510, Tungsten C/T/T2/Y3/W/Zire 71



TIPS THAT ARE INCLUDED IN THE POWERMONKEY V2 KIT

BRAND	TIPS	COMPATIBLE
Palm/Tungsten	DC2.5	Tungsten E, Zire 72, Zire 31, Zire 7
	E-2	Centro, m515, m505, m500, m130, Zire 71, Tungsten T3/T2/C & W, TX Tungsten E2, T5/Lifedrive, Lifedrive, Showtime / Treo, 650, 680, 700p, 700w, 700wx, 750V

TIPS THAT ARE INCLUDED IN THE POWERMONKEY V2 KIT

BRAND	TIPS	COMPATIBLE
Panasonic	V3 Mini USB	Lumix DMC-FX01
	D92	Sharp 550SH/770SH/902/903/703/GX15/17/25/30/30i, NEC:E101/A228/E313/E540/E606/E616/E616V /E808N/E808S/E808Y, MX6, MX7, SA6, SA7, VS2, VS3, VS6, VS7
	D95	D95
Pentax	DC3.0	Optio 50
Phillips	929	Savvy DB
Samsung	A110	SPH-A100/A110/A120/A200/A150, SPH: A110, A120
	A288	SCH: A210, A310, A399, A475, A505, A509, A530, A539, A563, A564, A570, A591, A592, A595, A599, A610, A650, A670, A720, A790, A795, A800, A900, C100, C120, C130, C207, C225, C417, U340, U410, U540, U620, SGH: D100, D307, D347, D357, D407, D410, D415, D417, D500, D500, C/D508, D600, SGH: E100, E105, E300, E315, E316, E317, E330N, E335, E350, E370, E400, E530, E600, E630, E635, E700, E710, E715, E730, E760, E770, E800, SGH: K258, M500/MM-5600, SCH: N181, N182, N191, N195, N288, N330, N370, N375, N626, N635, SGH: N200, N400, N500, N620, N625, N628, SGH: P107, P207, P400, P408, P510, P735, SGH: Q100, Q200, Q208, Q300, SGH: S100, S200, S208, S300, S300M, S307, S308, S500, SGH: T100, T108, T200, T208, T209, T309, T319, T400, T408, T410, T500, T609, T619, T707, T709, T719, U410, U340, U620 SGH: V100, V200, V205, V206, SCH: U340, U410, U620, X199, X209, X219, X309, X319, X359, X640, SGH: X100, X105, X4216, X427, X427M, X450, X460M X475, X480, X495, X497, X507, X600, X460, X660, SPH: A420, A580, A640, A900, M500, T100
	E900	SPH: A920, A940, A820, A880, A800, A740, A760, A660, A600, A500, A460 MM- A700, VM-A680, VGA1000, SPH-N400, SPHN-N240 SGH: A437, A717, D807, D900, T519, T509, T809, T629, D520, D800, D830, D807, E550, 727, 780, E870, E900, P300, T509, T809, V804, X820, X830, Z150, Z400, Z510, Z540 (D820, D900) SPH-M610, SCH-U420, E900, E870, U740, Z510/Z560/Z400/Z510/Z510i, Trace, T629, T809,
	A990	A630, A645, A850, A870, A930, A950, A970, A990
	Z500	Z500, Z130, Z140, Z300, E720, E810, E818, D720, E720/E810/E818, D720
	G600	/M305/M510/M520BEAT SGH-T539/T429/T439/T639/T409/I617/T729/R500, A513/A516/A737/A747/M210, SCH-R10/R410/R610, SGH- A117/A127/A226/A517/L768/L760/G608/G600/I607/I617, Ace i325, SPH: i325, M520, Instinct m800
	Micro USB	Samsung M220, Samsung M320, Samsung Rant SPH-M540, Samsung Highnote SPH- M630, Samsung TwoStep SCH-r470
	A31	A31, AF51, C81, EF81, EL71, S68
Samsung Camera	DC3.5x1.1	Digimax U-CA3, V3, V4, 350SE, 230, 340, 370, 410, CYBER#, ViVi 2800
Siemens	C25	A35, A36, A40, A50, C25, C28, C35, C35i, C45, M35, M35i, M45, M50, ME45, MT50, S25, S35, S45, S45i, SL42, SL45, SL45i (X25, 3518, 6618, C2588, 3518, 3618, 3508, 3568, 6688, 2118, A45, A10, SL50, 2508
	A31	A51, A52, A53, A55, A57, A60, A62, A65, A70, A75, AL21, AL72, AL75, AL76, AX21, AX72, AX76, C55, C60, C62, C65, C70, C72, C75, CC55, CC60, CC62, CC65, CC70, CC72, CC75, CF52, CF75, CF110, CFX65, CL75, CX65, CX70, CX75, M55, M60, M65, M75, MC55, MC60, MC65, MC75, ME75, S55, S65, S75, SP55, SP65, SP75, SF65, SK65, SL55, SL65, SL75, SG75, SXG75, SX1 (A31, AF51, C81, EF-81, EL71, S68
	C55	C56, C62, A51, A56, A52, C46, M45, MN60, S56, S66, S57, S75, SL56, SX-4, 2128, SC55, AX72, AX75, CF110, CF62, CF75, CFX65, CL70, CL75, CT56, T66, CX65, CX70, CX75, ME75, SF65, K65, SL75, SP65, SXG75
	DC2.5	BenQ
Skype NetGear	V3 Mini USB	5PH101
Sanyo	Micro USB	S1, Katana LX
Sony	Clie	Clie PEG Full Series
	DV1	Cyber-shot DSC-H1/H2/H5/M2/S40/S500/S600, /T10/T30/T50/T7 /W100 /W30 /W40/W5/W50/W7/W70, DSC-F88/L1/N1/N2/P10/P100/P12/P150 /P200/P32 /P41/P43/P52/P72/P73/P8/P92/P93/S60/S90/T5/T9/V1/V3

**TIPS THAT ARE INCLUDED IN THE POWERMONKEY V2 KIT**

BRAND	TIPS	COMPATIBLE
Sony	DV2	CCD-TR3300/TR516/TR716/TR76/TR818/TR910/TRV118/TRV128/TRV318 /TRV328/TRV36 /TRV41/TRV43, CCD-TRV46/TRV51/TRV57/TRV58 /TRV66 /TRV67/TRV68/TRV81/ TRV87/TRV88/TRV98, CD Mavica MVC-CD200/ CD250/CD300/CD350/CD400/CD500, DSC-W1/DSC-T9, CCD-TR3300/TR516/TR716 /TR76/TR818/ TR910/ TRV118/TRV128/TRV318/TRV328/TRV36/TRV41/TRV43, CCD-TRV46/TRV51/TRV57/TRV58/TRV66/ TRV67/ TRV68/TRV81/TRV87/TRV88/TRV98, CD Mavica MVC-CD200/CD250/CD300/CD350/CD400/CD500 Cyber-shot DSC-F707/717/828/R1/S70/S75/S85, DCR-TRV210/TRV340/TRV350/TRV360/TRV460/TRV510/ TRV520/TRV525 FD Mavica MVC-FD100/FD200/FD97, Handycam CCD-TR315/TR416/TR618/TR917/TR940 /TR97/TRV107/TRV108/TRV138/TRV15/TRV16/TRV17, Handycam CCD-TRV215/TRV25/TRV308/TRV315 /TRV338/TRV35/TRV37/TRV408/TRV49/TRV608/TRV615/Handycam CCD-TRV63/TRV65/TRV715/TRV75/ TRV78/TRV815/TRV85/TRV93/TRV95/TRV99, Handycam DCR-DVD100/DVD101/DVD200/DVD201 /DVD300/DVD301/ Handycam DCR-PC100/PC101/PC105/PC110/PC115/PC120BT/PC330/PC9/TR7000 Handycam DCR-VX1000/VX2000/VX2100/VX700, Handycam HDR-FX1/HC1, Mavica MVC-CD1000,Handycam DCR-TRV Series
	DV3	Sony Cybershot P9
	DV4	Handycam DCR-DVD103/DVD105/DVD203/DVD205/DVD305/DVD403/DVD405/DVD505/DVD602/ DVD605/DVD705/DVDDVD755/DVDS803/DVD92 Handycam DCR-HC1000/HC20/HC21/HC26/HC30/HC32/HC36/HC40/HC42/HC46/HC65/HC85/HC90/HC96 Handycam DCR-IP1/IP220/IP45/IP55/IP7BT/PC100/PC109/PC350/PC55 Handycam DCR-SR100, HandycamHDR-HC3
Sony Ericsson	T28	A2218z, A2618, A2618s, A2628, A3618sM F500i, J210i, J300i, K500i, K508i, K600i, K608i, K700i, P800, P900, P910i, R300d, R300LX, R300z, R320, R320s, R380 WORLD, R380e, R380s, R520m, R600, S700i, T20e, T20s, T28 WORLD, T28z, T29, T29s, T39m, T60c, T60d, T61c, t61d, T61LX, T61z, T62u, T65, T66, T68i, T100, T105, T200, T226, T230, T290i, T300, T306, T310, T318, T600, T620, T630, V600i, V800, Z200, Z300i, Z600, Z800i, Z1010 (K300, Z500, S Series, J700i
	K750i	D750i, J100a, J100c, J100i, J110i, J120i, J220a, J220c, J230c, J220i, J230i, K200i, K220i, K310a, K310c K310i, K510a, K510c, K510i, k550i, K550im, K610i, K601i, K618i, K750c, K750i, K758c, K790a, K790i, K800i, K810i, M600i, M608c, P990i, V630i, W200a, W200i, W300c, W300i, W550i, W550c, W580i, W600, W600c, W600i, W610i, W660i, W700C, W700i, W710c, W710i, W712a, W800, W800i, W800c, W810c, W830c, W803i, W850i, W880i, W900c, W900i, W950i, W958c, Z610i, Z710c, Z710i, Z520a, Z520c, Z720i, Z525a, Z525i, Z520c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z601i, Z710i, Z750i (HBH-GV435
T Mobile	V3 Mini USB	SDA-11, MDA Vario (inc co-pilot), MDA Pro, MDA Compact II, SDA, SDA Music, Dash
TomTom	DC4.0	GO, GO300, 500, 510, 700, 710, 910
Two Way Radios	DC4.0	
UT Starcom	DC2.5	Slice
VK	DC2.5	Mobile Helio 650C, Kickflip
USB	USB Standard	For general charging where electronic device is supplied with USB charging cable.
USB	USB Retractable	For charging the powermonkey from laptop computer
USB	USB for iPod	iPod Shuffle/Nano/Mini/Video